

## 9.2 STEPBOARDS PRODUCT INFORMATION SHEET

“Unmatched in quality, range and value”



### SPECIFICATIONS

<b>Part Numbers</b>	Vehicle Specific product please check Bushranger Catalogue for Part Numbers
<b>Materials</b>	Bright anodised aluminium step extrusion with non-slip grit tread tape Heavy zinc plated fitting brackets
<b>Dimensions</b>	Vehicle Specific
<b>Capacity</b>	Not applicable
<b>Weight</b>	From 10 to 16 kg
<b>Warranty</b>	5 Year No-Fuss Warranty

### VEHICLE APPLICATIONS

All vehicle specific part numbers – parts available for most popular 4WDs, past and current.


### PRODUCT TIPS

Check Price List for configuration of the board end fittings for each set. These indicate the type of moulded plastic ends or aluminium mudflaps supplied in the kit.

### SAFETY PRECAUTIONS

Read instructions carefully and check kit prior to fitting

...Continued over page

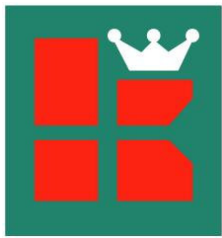

# 9.2 STEPBOARDS PRODUCT INFORMATION SHEET

“Unmatched in quality, range and value”

## FEATURES

## BENEFITS

Full length extrusion	Protects the vehicle's lower body against bitumen, mud and stone chip damage
Bright anodised finish	Will not tarnish
Non-slip grit tread tape	Ensures all weather sure-footed safety
Fitting brackets are heavy zinc plated	Protects against rust
All late model vehicles have dedicated fitting brackets and are fully welded and individually designed to suit each vehicle application	Easy installation
Stepboards are always body mounted, not chassis mounted	Becomes an integral part of body to offset flex between body and chassis, also gives maximum ground clearance

## FITTING INSTRUCTIONS (Included in Product Packaging) – Sample for Hilux Dual Cab

**Check kit supplied is for vehicle being fitted and that kit is complete as listed.**  
**Read the instructions to be sure you understand all aspects of fitting the vehicle before proceeding.**

1. Assemble the two Stepboards by fixing the moulded plastic end caps to one end of each board with M8 x 14mm bolts and flange nuts. Slide into each channel on the underside of boards three M8 hex nuts (6 per board). Fit to the remaining end of the board the other plastic end cap supplied in the kit.
2. Starting on either side of the vehicle, proceed as follows: Move to the underside of the vehicle and attach the three Stepboard brackets – front, centre and rear on each side

Front Bracket – fit to the captive stud and secure with M8 flange nut and M8 x 20mm bolt and lock washer into the captive nut (refer diagram 1)


Centre and Rear Brackets – fit and secure with the M8 x 20mm bolts and flange nuts into existing holds in the body braces (refer diagram 2)

NB: The brackets are identified with stamped part numbers (see kit contents details)

3. Lift the assembled Stepboards onto the fitted brackets, position and attach with M8 x 14mm bolts, lock washers and flat washers, picking up nuts in the channels on the underside of the steps


***Your Stepboards are now ready for use***

**Diagram 1:**

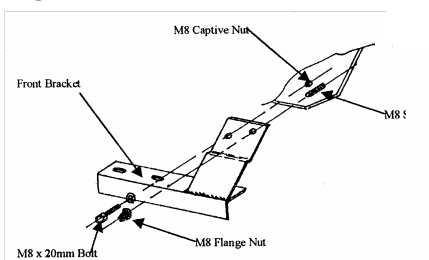


**FRONT BRACKET**

**Diagram 2:**

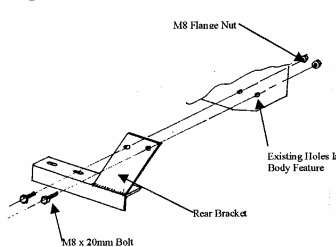

**CENTRE AND REAR BRACKET**

**Diagram 3:**

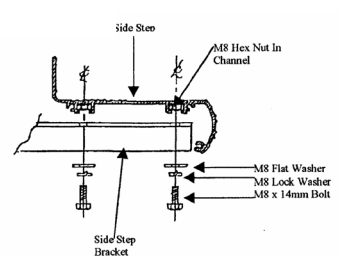

**SIDE STEP TO BRACKET ATTACHMENT**